


 
# PRESSURE VESSELS - PREVENTIVE MAINTENANCE SCHEDULE

## 10.4 CU. FT. PRESSURE VESSEL

### DUAL OPERATOR

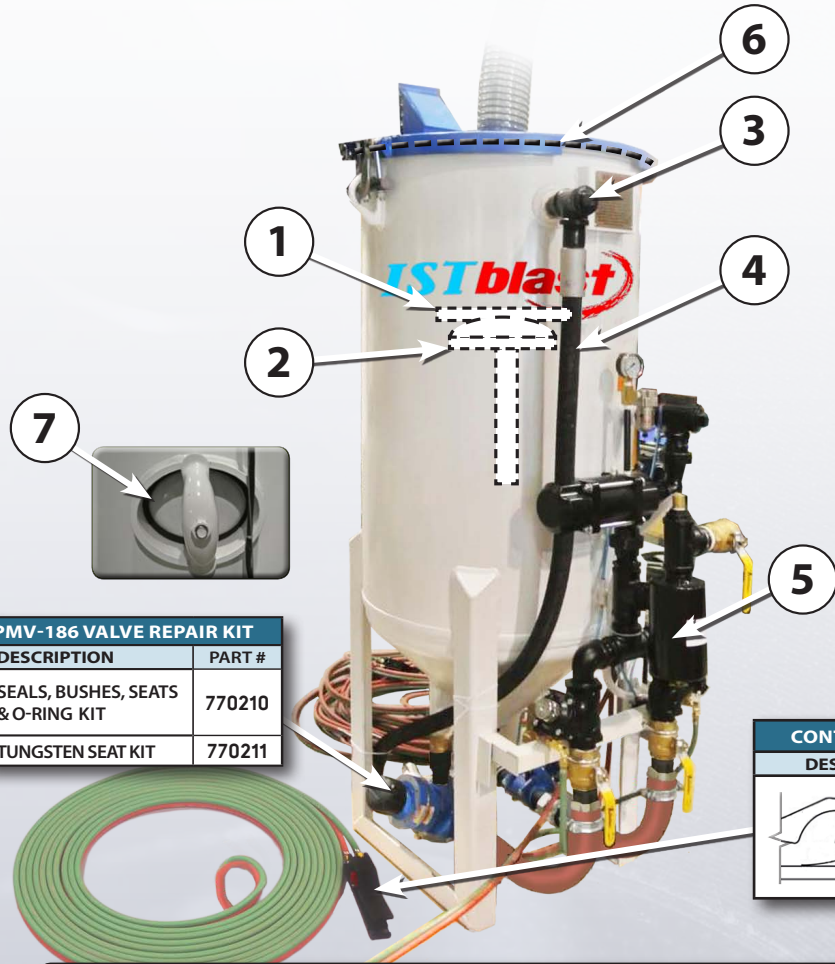

PMV-186 VALVE REPAIR KIT	
DESCRIPTION	PART #
SEALS, BUSHES, SEATS & O-RING KIT	770210
TUNGSTEN SEAT KIT	770211

CONTROL HANDLE REPAIR KIT	
DESCRIPTION	PART #
	770061

**Note :** Refer to owner's manual for complete part list of the pressure vessel. Address maintenance procedure to any air leaks occurring in between the schedule maintenance.

## MAINTENANCE & OPERATION

### MONTHLY

- Empty water separator [#5]

### 6 MONTHS

- Verify the inside the plug [#3]
- Verify the depressurizing hose at pinch point [#4]
- Verify the plunger for excessive wear and air leaks when the vessel is pressurized [#2]
- Verify the O-Ring for excessive wear and air leaks when the vessel is pressurized [#2]

### 12 MONTHS

- Verify integrity of the sealing gasket [#6]
- Verify integrity of the sealing gasket [#7]

## RECOMMENDED SPARE PARTS

#	DESCRIPTION	PART #
1	5" Plunger (LG serie)	610044
2	O-Ring 10.4 cu.ft.	740104
3	Plumbing plug 1 1/4"	630844
4	3/4" SBH hose	606003
6	Cover seal	-/-
7	Access door gasket	740101