

DUST COLLECTOR PREVENTIVE MAINTENANCE SCHEDULE

DCM 200



DAILY MAINTENANCE & OPERATION

Shake bag once a day at the end of shift when motor is off. (if equipped with automatic shaker no maintenance required)

MONTHLY MAINTENANCE

Waste drum : check level every week and empty if needed.

BI ANNUAL MAINTENANCE

Motor : Check bearing of the motor

RECOMMENDED SPARE PARTS

DESCRIPTION	PART Nb
DB 6 bag (qty 30)	601316
Piston	608405
Solenoid (when equipped with automatic shaker)	608568

Note :

Gate adjustment is required when changing type of abrasive please call manufacturer for proper air flow calibration.