


## **OPTION OIL COOLING – CONNECTING PROCEDURE**

### 1 - Oil pipes connection between the recycler and the oil cooler

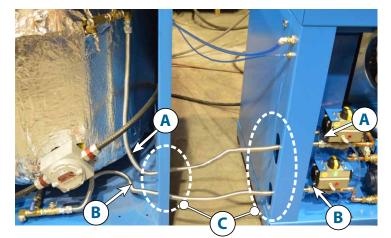

Slip the 2 oil pipes [A] and [B] through the openings C and connect to Rotex valves as shown. tighten firmly.

<u>NB:</u> Remember to fill oil in the white nylon hose [D] to avoid air bubbles in the circuit. Since the 2 hoses [A] and [B] are empty when connecting you will certainly need to add oil to obtain the required level. (see filling procedure)

# 

### 2 - Hose connections between the recycler and the oil cooler (At rear)


- 1. Insert the blue poly hose ½ "[E] in the push-in [E1] and [E2]
- 2. Insert the blue poly hose ¼ "[F] in the push-in [F1] and [F2]
- 3. attach hoses and power cable as shown to the recycler (clips)

#### 3 - Electrical cable connexion

3.1 - Completely unscrew the connector and pass the wires of the power cable as shown **fig.1** 

3.2 - Put blue compound around the wires and screw part **[P1]** and screw part **[P2]** over.

3.3 - Unscrew the electrical box cover **[F4]** and insert wires through **F3** as shown **Fig. 3**. Connect the wires in the electrical box with connectors as shown below, then firmly screw the cover.

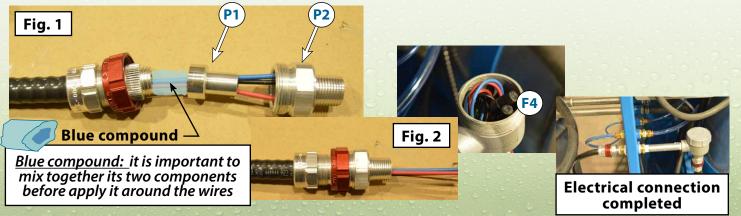

If you need more information, please call us at : 1 877 629-8202