
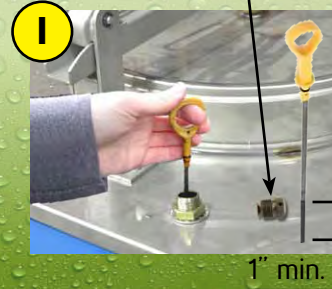


SOLVENT RECYCLER SR30 - 30V

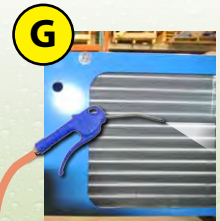

DAILY MAINTENANCE & OPERATION			
A	Ensure the clean solvent tank is empty.	E	Keep the surface of the unit clean.
B	Remove the plastic bag and ensure the bottom of the boiler is clean. Remove any contaminants from the bottom of boiler.	F	Review and replace illegible or damaged stickers.
C	Put a new plastic bag in the boiler and secure with the ring*	When the unit is full of used solvent :	
D	Fill up the unit with used solvent to a level of 2" below the retaining ring.	1- Make sure the lip of the boiler is clean. 2- Verify the cover seal is in good shape and clean. 3- Close the lid. 4- Press the start button. 5- Verify that the oil breather vent (E/I) is not plugged up	

WEEKLY MAINTENANCE			
G	Ensure that the condenser fins are clean and use an air blow gun if necessary.	H	Check that the cover seal is in good shape and replace if necessary.
		I	Check the oil level in the overflow tank is at 1" (at a minimum) with a dipstick.

RECOMMENDED SPARE PARTS					
#	Description	Part number	#	Description 30/30V	Part number
1	Replacement bags (25 bags)	300004	2	Orange cover seal	304018
	Replacement bags (100 bags)	300006		Black cover seal	304027
			3	Oil 2.5 gal / 10 L	330067

* Ensure to fold the protruding portion of the bag inwards so as not to cover any of the spouts.