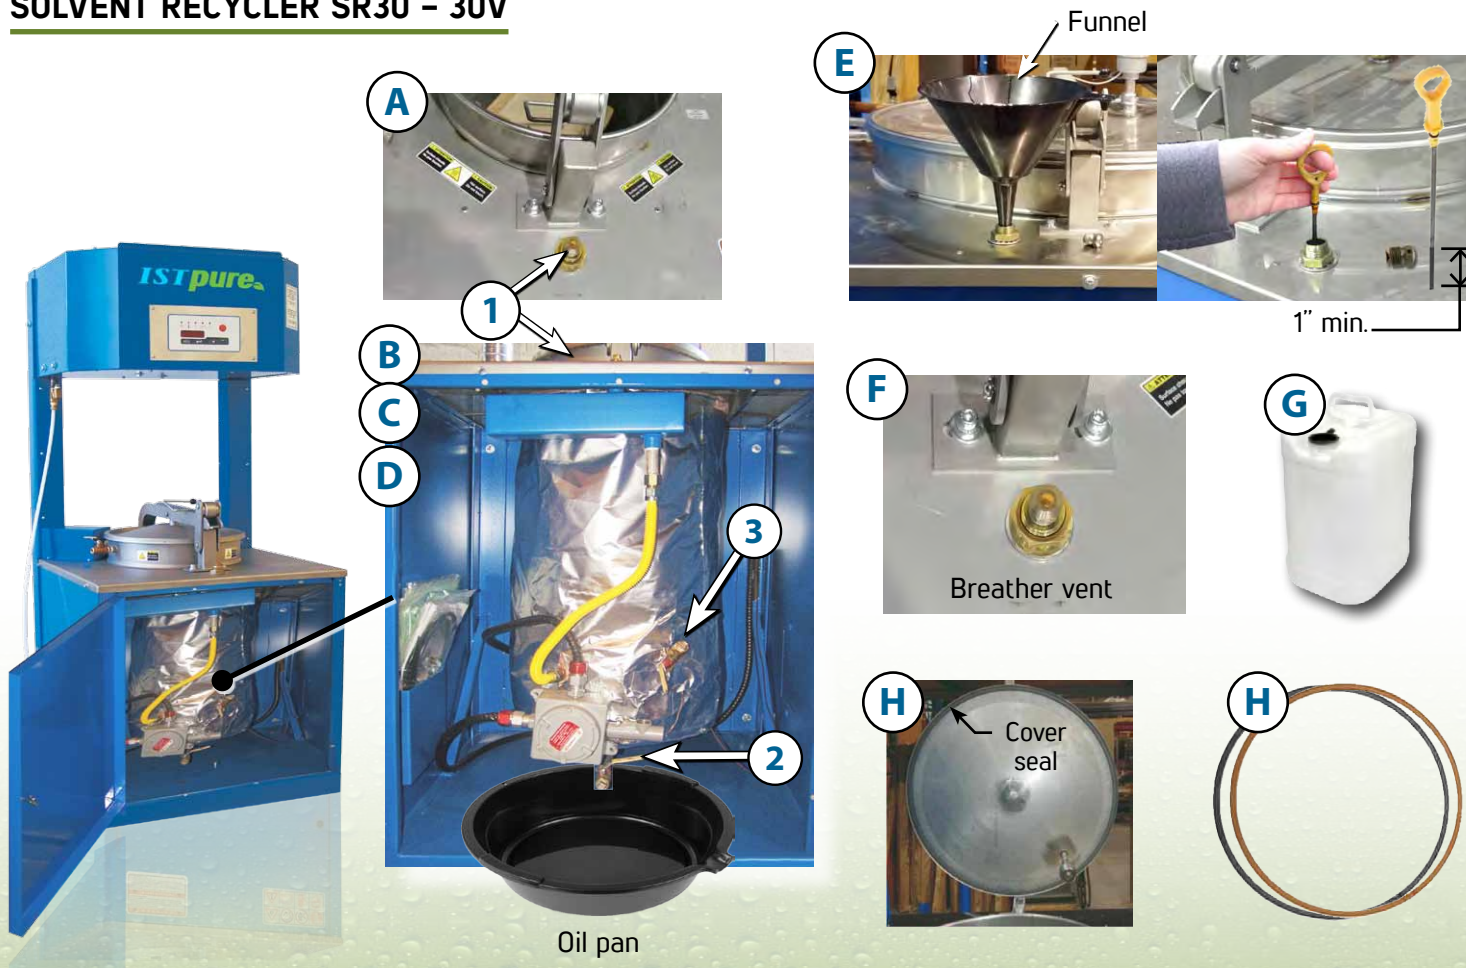


SOLVENT RECYCLER SR30 – 30V

STEPS FOR OIL CHANGE PROCEDURE

A	Remove the breather vent #① and remove the ball valve #② plug and open the purging valve #②.
B	Place an empty oil pan below the ball valve #② and open the valve to purge the used oil.
C	When empty, close the ball valve #②, remove the container and screw back the plug on the ball valve #②.
D	Remove the plug and open the ball valve #③.
E	Insert a funnel in breather vent hole #① and pour new thermic oil. When the ball valve #③ leaks, close it and screw back the plug. Continue to fill until the oil level reach 1" in the overflow tank. Verify with a dipstick.
F	Screw back the breather vent #①.

Change the oil every 2000 hours of work or once a year whichever comes first. (Recommended)

#	Description	Part number
G	Oil 2.5 gal / 10 L	330067
H	Orange or black cover seal	304018