
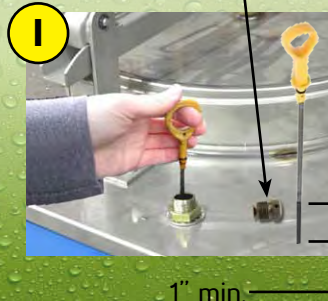


### SOLVENT RECYCLER SR60 - 60V

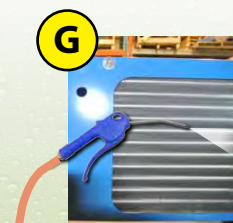

#### DAILY MAINTENANCE & OPERATION

<b>A</b>	Ensure the clean solvent tank is empty.	<b>E</b>	Keep the surface of the unit clean.
<b>B</b>	Remove the plastic bag and ensure the bottom of the boiler is clean. Remove any contaminants from the bottom of boiler.	<b>F</b>	Review and replace illegible or damaged stickers.
<b>C</b>	Put a new plastic bag in the boiler and secure with the ring*	<b>When the unit is full of used solvent :</b> 1- Make sure the lip of the boiler is clean. 2- Verify the cover seal is in good shape and clean. 3- Close the lid. 4- Press the start button. 5- Verify that the oil breather vent (E/I) is not plugged up	
<b>D</b>	Fill up the unit with used solvent to a level of 2" below the retaining ring.		

#### WEEKLY MAINTENANCE

<b>G</b>	Ensure that the condenser fins are clean and use an air blow gun if necessary.	<b>H</b>	Check that the cover seal is in good shape and replace if necessary.
		<b>I</b>	Check the oil level in the overflow tank is at 1" (at a minimum) with a dipstick.

#### RECOMMENDED SPARE PARTS

#	Description	Part number	#	Description 60/60V	Part number
1	Replacement bags (100 bags)	300019	2	Orange cover seal	304023
3	Oil 2.5 gal / 10 L	300067		Black cover seal	304024

\* Ensure to fold the protruding portion of the bag inwards so as not to cover any of the spouts.