


**SOLVENT RECYCLERS
SR30 - 30V & SR60 - 60V**

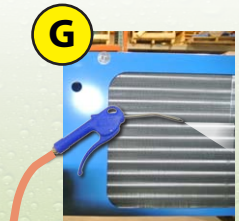

DAILY MAINTENANCE & OPERATION

A	Ensure the clean solvent tank is empty.	E	Keep the surface of the unit clean.
B	Remove the plastic bag and ensure the bottom of the boiler is clean.	F	Review and replace illegible or damaged stickers.
C	Remove any contaminants from the bottom of boiler.	When the unit is full of used solvent :	
C	Put a new plastic bag in the boiler and secure with the ring*	1- Make sure the lip of the boiler is clean.	
D	Fill up the unit with used solvent to a level of 2" below the retaining ring.	2- Verify the cover seal is in good shape and clean.	
		3- Close the lid.	
		4- Press the start button.	
		5- Verify that the oil breather vent (E/I) is not plugged up	

WEEKLY MAINTENANCE

G	Ensure that the condenser fins are clean and use an air blow gun if necessary.	H	Check that the cover seal is in good shape and replace if necessary.
		I	Check the oil level in the overflow tank is at 1" (at a minimum) with a dipstick.

RECOMMENDED SPARE PARTS

#	Description	Part number	#	Description	30/30V PN	60/60V PN
1	Replacement bags (25 bags)	300004	2	Orange cover seal	304018	304023
	Replacement bags (100 bags) (SR30)	300006		Black cover seal	304027	304024
	Replacement bags (100 bags) (SR60)	300019	3	Oil 2.5 gal / 10 L	330067	

* Ensure to fold the protruding portion of the bag inwards so as not to cover any of the spouts.