



## PAINT BOOTH MAT



Fast installation in less than 30 min.



Vacuum daily<sup>1</sup> to remove contaminants



Mist daily with Particle Control



Typical amount of dirt removed daily

**Warning!** Do not install or remove the mat, or vacuum the mat or bare floor when explosive concentrations of flammable materials are present, as static discharge may occur during these activities. Always ventilate spray booth completely to remove any ignitable vapors and dust prior to these activities.

<sup>2</sup>Adhesion may vary based on existing floor conditions. Any adhesive mat has the potential to leave residue or lift sections of painted surfaces and loose or damaged tiles. On very smooth surfaces (e.g. tile, paint, epoxy), the mat may adhere too well. If the floor is dirty or covered with uneven overspray, the mat will not adhere as well. Pay special attention to cleaning the corners and edges of the floor where dust and overspray can accumulate and compromise adhesion. Check adhesion periodically to ensure results meet your expectations and replace every 3 to 4 months. Not intended for home use or wooden floors.

### KEEPS PAINTWORK CLEAN

- Durable non-woven material traps dust and overspray on the floor
- Vacuum daily to remove dust and overspray from booth<sup>1</sup>
- Mist daily with Particle Control for best results
- Reduces paint contamination by 50% or more

### IMPROVES BOOTH ENVIRONMENT

- Green color makes booth pleasant and bright
- Maintains good lighting and reduces noise in the booth
- Protects booth floor – no more scraping o overspray buildup

### DURABLE, PADDED MAT WITH SOLVENT-RESISTANT BACKING

- Typically lasts 3 to 4 months, even in high-volume booths
- Padding makes standing and kneeling more comfortable, reducing painter fatigue
- Adhesive backing holds tight to prevent wrinkling or bunching<sup>2</sup>

### FAST AND EASY TO INSTALL

- Two people can install Paint Booth Mat in less than 30 minutes
- Minimal floor prep and no special application tools required
- Tape seams with standard 2-inch masking tape
- One roll covers most automotive paint booth floors

### COMPLIANT WITH NFPA 33 FOR SPRAY BOOTH SAFETY

- Surface Resistance and Static Decay tests @ 50 % R.H.
- Due to a wide variety of conditions, daily use of Particle Control is recommended

### PRODUCT DETAILS

<b>Part number</b>	206035
<b>Size</b>	32 inches by 150 feet (400 square feet)
<b>Color</b>	<b>Green</b>
<b>Durability</b>	Replacement recommended every 3 to 4 months
<b>Shipping Info</b>	14 x 14 x 33 inches - 44 lb.



	<b>Part Number</b>	<b>Size</b>
	206040	3.78 L (1 U.S. gal)
	206045	18.9 L (5 U.S. gal)
	206050	210 L (55 U.S. gal)

**CUTS PAINT DEFECTS BY 50% OR MORE!**



## PAINT BOOTH MAT (CONT'D)



### INSTALLATION

**Prepare booth floor – Paint Booth Mat sticks best to clean, smooth booth floor<sup>2</sup>**

- Remove any masking tape that is stuck to the floor
- Scrape-o areas where there is major overspray build-up
- Sweep or blow loose dirt, dust, overspray and other material from booth floor
- Completely remove any floor coating before installation; pressure wash, if necessary
- Make sure the floor is completely dry; run a bake cycle if necessary
- Apply a strip of masking tape onto the floor
- If tape sticks adequately, proceed; if not, floor requires additional cleaning

**Place Paint Booth Mat on booth floor**

- Roll out and cut mat to fit your booth; a standard utility knife works well
- Avoid placing adhesive side on the floor until you are ready to place it in its permanent position
- Place mat sections using one of the following basic patterns, trimming rows as necessary for your booth

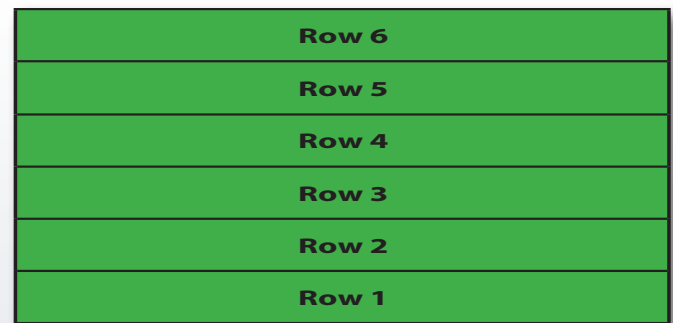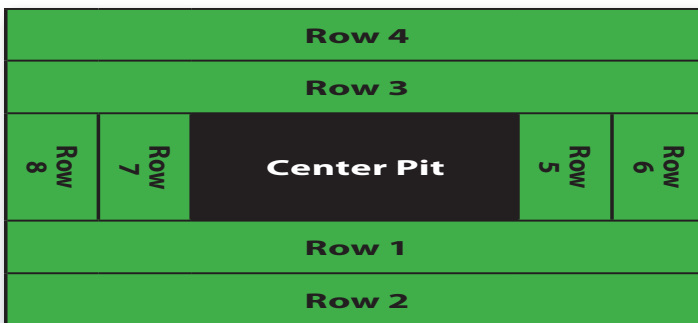

#### **CAUTION**

**Be careful when using cutting tools and when working around the open/uncovered floor pit**

- Tape seams between strips with standard masking tape or equivalent (2 inches or wider) as well as edges on the perimeter of the mat that border the booth walls

### FOR MAXIMUM PERFORMANCE AND LONGEVITY

- Using a pump sprayer, apply a light coat of Particle Control (~ 1 quart for a typical booth floor) to mat each day
- Vacuum daily<sup>1</sup>, either at the end of the work day or at the beginning, before you apply Particle Control
- Inspect mat regularly and re-tape any damaged or exposed edges; identify and replace any damaged areas of the mat that may cause someone to trip and fall

#### **CAUTION**

**Do not oversaturate the mat with Particle Control as that may make it slippery or reduce its adhesion to the floor.**

### REPLACING BOOTH MAT

- Remove and replace Paint Booth Mat when you see areas where it has worn through or when the amount of contaminants in your paintwork increases
- Dispose of used mat as you would dispose of used plastic sheeting or similar waste material.

**IMPORTANT NOTICE TO PURCHASER:** The information in this document is based on tests that we believe are reliable. Your results may vary due to differences in test types and conditions. You must evaluate and determine whether the product is suitable for your intended application. Since conditions of product use are outside of our control and vary widely, the following is made in lieu of all express and implied warranties (including the implied warranties of merchantability and fitness for a particular purpose): Except where prohibited by law, Seller's only obligation and your only remedy, is replacement or, at Seller's option, refund of the original purchase price of product that is shown to have been defective when you received it. In no case will Seller be liable for any direct, indirect, special, incidental, or consequential damages (including, without limitation, lost profits, goodwill, and business opportunity) based on breach of warranty, condition or contract, negligence, strict tort, or any other legal or equitable theory.

